




Workbench - Mechanical Introduction 12.0

Chapter 4

Static Structural Analysis

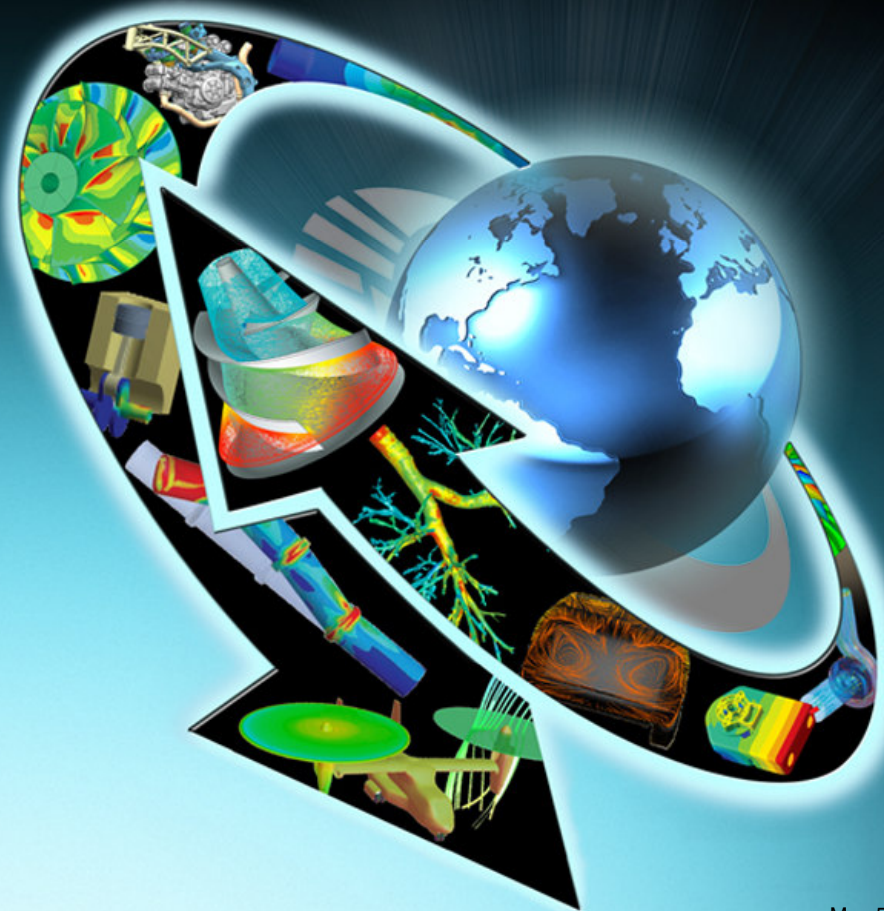

- **In this chapter, performing linear static structural analyses in Simulation will be covered:**
 - A. Geometry and Elements**
 - B. Assemblies and Contact Types**
 - C. Analysis Settings**
 - D. Environment, including Loads and Supports**
 - E. Solving Models**
 - F. Results and Postprocessing**
- **The capabilities described in this section are generally applicable to *ANSYS DesignSpace Entra* licenses and above.**
 - **Some options discussed in this chapter may require more advanced licenses, but these are noted accordingly.**

Basics of Linear Static Analysis

- For a linear static structural analysis, the displacements $\{x\}$ are solved for in the matrix equation below:

$$[K]\{x\} = \{F\}$$


Assumptions:

- $[K]$ is constant
 - Linear elastic material behavior is assumed
 - Small deflection theory is used
 - Some nonlinear boundary conditions may be included
- $\{F\}$ is statically applied
 - No time-varying forces are considered
 - No inertial effects (mass, damping) are included
- It is important to remember these assumptions related to *linear static* analysis. *Nonlinear static* and *dynamic* analyses are covered in later chapters.

A. Geometry


- In structural analyses, all types of bodies supported by Simulation may be used.

- For *surface bodies*, thickness must be supplied in the “Details” view of the “Geometry” branch.

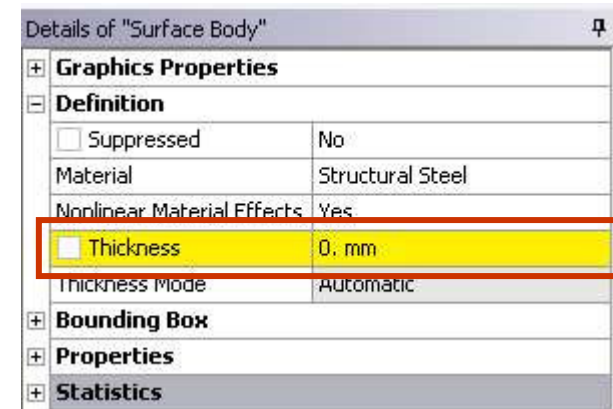


- The cross-section and orientation of *line bodies* are defined within DesignModeler and are imported into Simulation automatically.

- A Point Mass can be added to a model (Geometry branch) to simulate parts of the structure not explicitly modeled:
 - A point mass is associated with surface(s) only.
 - The location can be defined by either:
 - (x, y, z) coordinates in any user-defined Coordinate System.
 - Selecting vertices/edges/surfaces to define location.
 - Point mass is affected by “Acceleration,” “Standard Earth Gravity,” and “Rotational Velocity”. No other loads affect a point mass.
 - The mass is ‘connected’ to selected surfaces assuming *no stiffness* between them.
 - No rotational inertial terms are present.




Details of "Point Mass"	
Scope	
Geometry	1 Edge
<input type="checkbox"/> X Coordinate	26.13 mm
<input type="checkbox"/> Y Coordinate	47.27 mm
<input type="checkbox"/> Z Coordinate	0. mm
Location	Click to Change
Definition	
<input checked="" type="checkbox"/> Mass	0. kg
Mass Moment of Inertia X	0. kg·mm ²
Mass Moment of Inertia Y	0. kg·mm ²
Mass Moment of Inertia Z	0. kg·mm ²
Suppressed	No
Behavior	Deformable

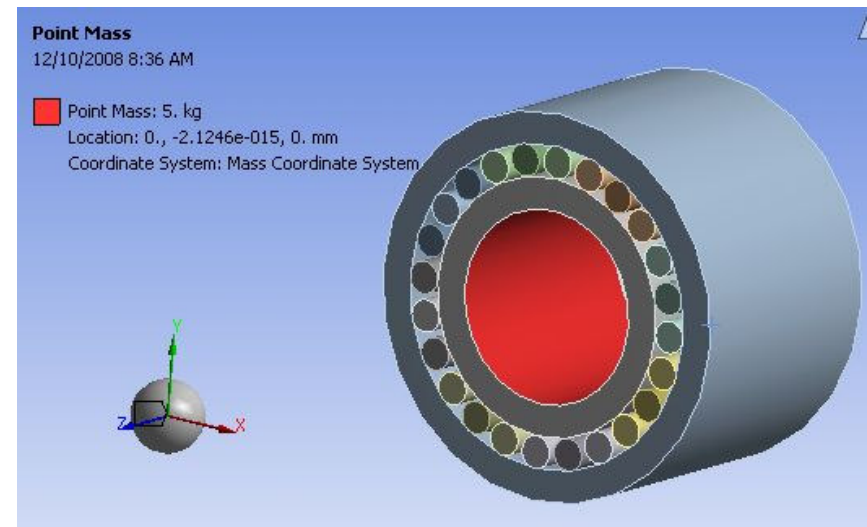

- ***Young's Modulus* and *Poisson's Ratio*** are required for linear static structural analyses:
 - **Material input** is handled in the “Engineering Data” application.
 - **Mass density** is required if any inertial loads are present.
 - **Thermal expansion coefficient** is required if a uniform temperature load is applied.
 - **Thermal conductivity** is NOT required for uniform temperature conditions.
 - **Stress Limits** are needed if a Stress Tool result is present.
 - **Fatigue Properties** are needed if Fatigue Tool result is present.
 - Requires **Fatigue Module** add-on license.

B. Assemblies – Solid Body Contact



- When importing assemblies of solid parts, contact regions are automatically created between the solid bodies.
 - Contact allows non-matching meshes at boundaries between solid parts
 - Tolerance controls under “Contact” branch allows the user to specify distance of auto contact detection via slider bar

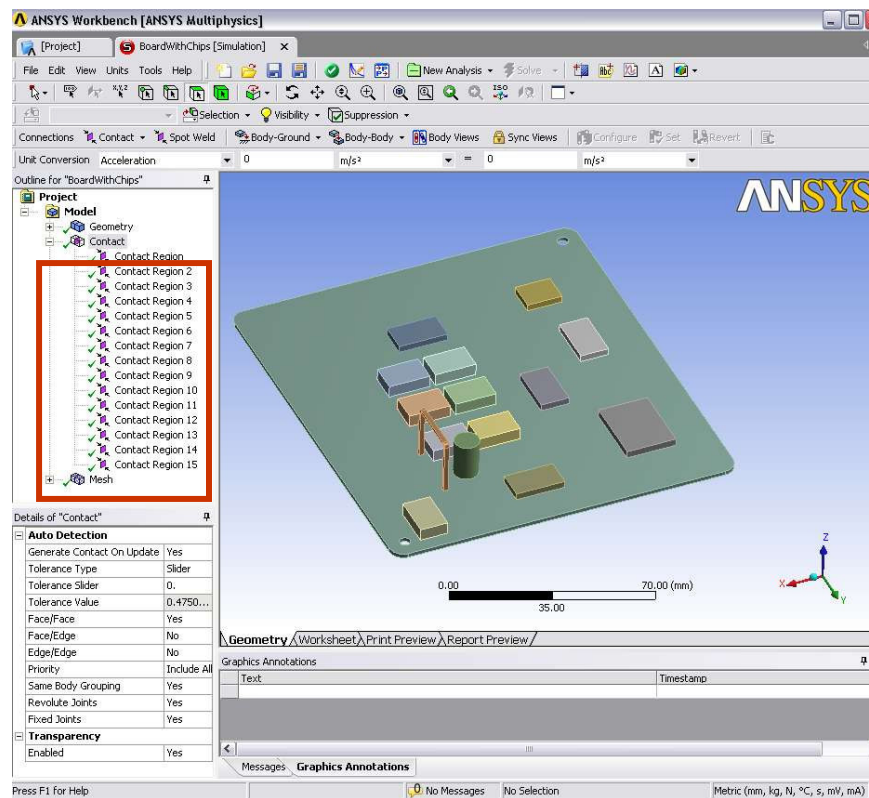

... Assemblies – Solid Body Contact

- In Simulation, the concept of *contact* and *target* surfaces are used for each contact region:
 - One side of a contact region is referred to as a contact surface, the other side is referred to as a target surface.
 - The contact surfaces are restricted from penetrating through the target surface.
 - When one side is designated the contact and the other side the target, this is called *asymmetric contact*.
 - If both sides are made to be contact & target this is called *symmetric contact*.
 - By default, Simulation uses *Symmetric contact* for solid assemblies.
 - For *ANSYS Professional* licenses and above, the user may change to *asymmetric contact*, as desired.

Details of "Contact Region"	
Scope	
Scoping Method	Geometry Selection
Contact	1 Face
Target	1 Face
Contact Bodies	Part 1
Target Bodies	Part 9
Definition	
Type	Bonded
Scope Mode	Automatic
Behavior	Symmetric
Suppressed	No
Advanced	
Formulation	Pure Penalty
Normal Stiffness	Program Controlled
Update Stiffness	Never
Thermal Conductance	Program Controlled
Pinball Region	Program Controlled

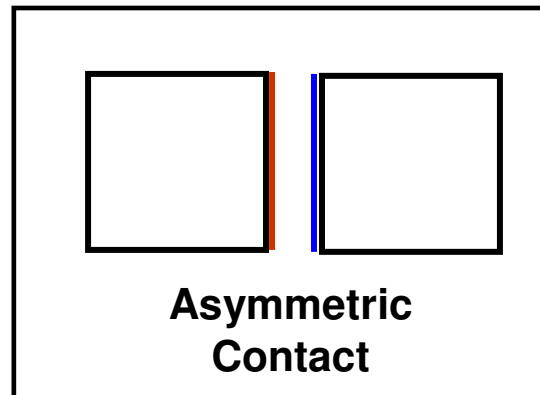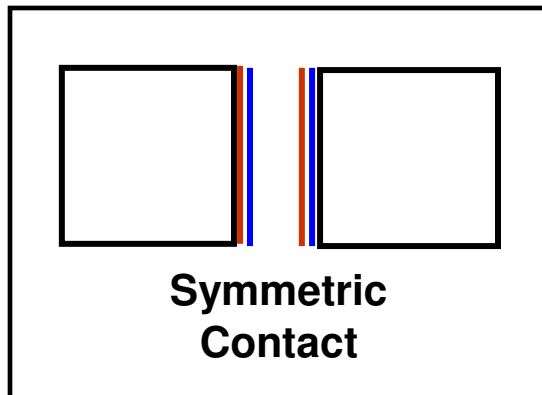



- Five contact types are available:

Contact Type	Iterations	Normal Behavior (Separation)	Tangential Behavior (Sliding)
Bonded	1	No Gaps	No Sliding
No Separation	1	No Gaps	Sliding Allowed
Frictionless	Multiple	Gaps Allowed	Sliding Allowed
Rough	Multiple	Gaps Allowed	No Sliding
Frictional	Multiple	Gaps Allowed	Sliding Allowed

- **Bonded** and **No Separation** contact are linear and require only 1 iteration.
- **Frictionless**, **Rough** and **Frictional** contact are nonlinear and require multiple iterations.

- Nonlinear contact types allow an “interface treatment” option:

- “Add Offset”: input zero or non-zero value for initial adjustment
- “Adjusted to Touch”: ANSYS closes any gap to a just touching position (*ANSYS Professional* and above)

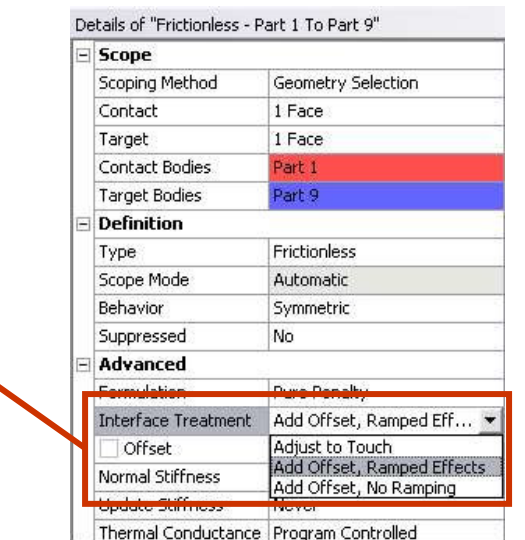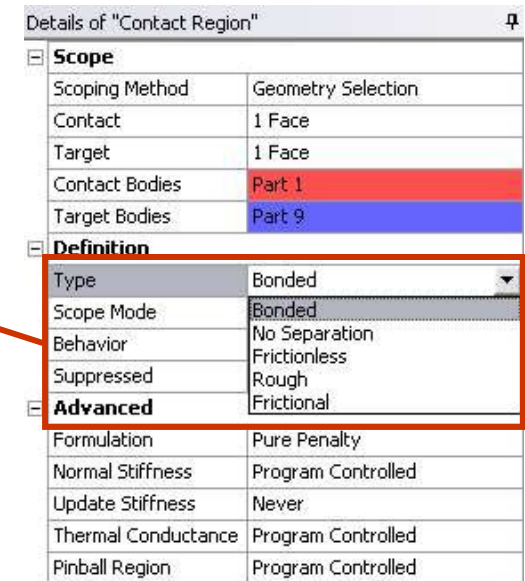

- Interface treatment options:

Details of "Frictionless - InnerRace To Pin2"	
Target	1 Face
Contact Bodies	InnerRace
Target Bodies	Pin2
Definition	
Type	Frictionless
Scope Mode	Automatic
Behavior	Symmetric
Suppressed	No
Advanced	
Formulation	Pure Penalty
Interface Treatment	Add Offset, No Ramping
Offset	5. mm
Normal Stiffness	Program Controlled

Add offset: contact surface is numerically offset a given amount in positive or negative direction (offset can be ramped on).

Details of "Frictionless - InnerRace To Pin2"	
Scope	
Scoping Method	Geometry Selection
Contact	1 Face
Target	1 Face
Contact Bodies	InnerRace
Target Bodies	Pin2
Definition	
Type	Frictionless
Scope Mode	Automatic
Behavior	Symmetric
Suppressed	No
Advanced	
Formulation	Pure Penalty
Interface Treatment	Adjust to Touch
Normal Stiffness	Program Controlled
Update Stiffness	Never
Pinball Region	Program Controlled

Adjusted to touch: offsets contact surface to provide initial contact with target regardless of actual gap/penetration.


... Assemblies – Solid Body Contact

- **Advanced options (see chapter 3 for additional details on the pinball region):**
 - **Pin Ball Region:**
 - Inside pinball = *near-field contact*
 - Outside pinball = *far-field contact*
 - Allows the solver to more efficiently process contact calculations.
- For *ANSYS Professional* licenses and above, mixed assemblies of shells and solids are supported as well as more contact options.

Details of "Contact Region" ↑


Scope	
Scoping Method	Geometry Selection
Contact	1 Face
Target	1 Face
Contact Bodies	Part 1
Target Bodies	Part 9
Definition	
Type	Bonded
Scope Mode	Automatic
Behavior	Symmetric
Suppressed	No
Advanced	
Formulation	Pure Penalty
Normal Stiffness	Program Controlled
Update Stiffness	Never
Thermal Conductance	Program Controlled
Pinball Region	Radius
Pinball Radius	0. mm

In this case, the gap between the two parts is bigger than the pinball region, so no automatic gap closure will be performed.

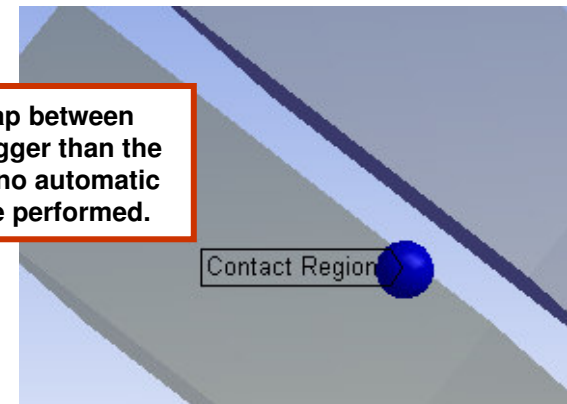

... Assemblies – Spot Weld

- Spot welds provide a means of connecting shell assemblies at discrete points:
 - Spotweld definition is done in the CAD software. Currently, only DesignModeler and Unigraphics define supported spot weld definitions.

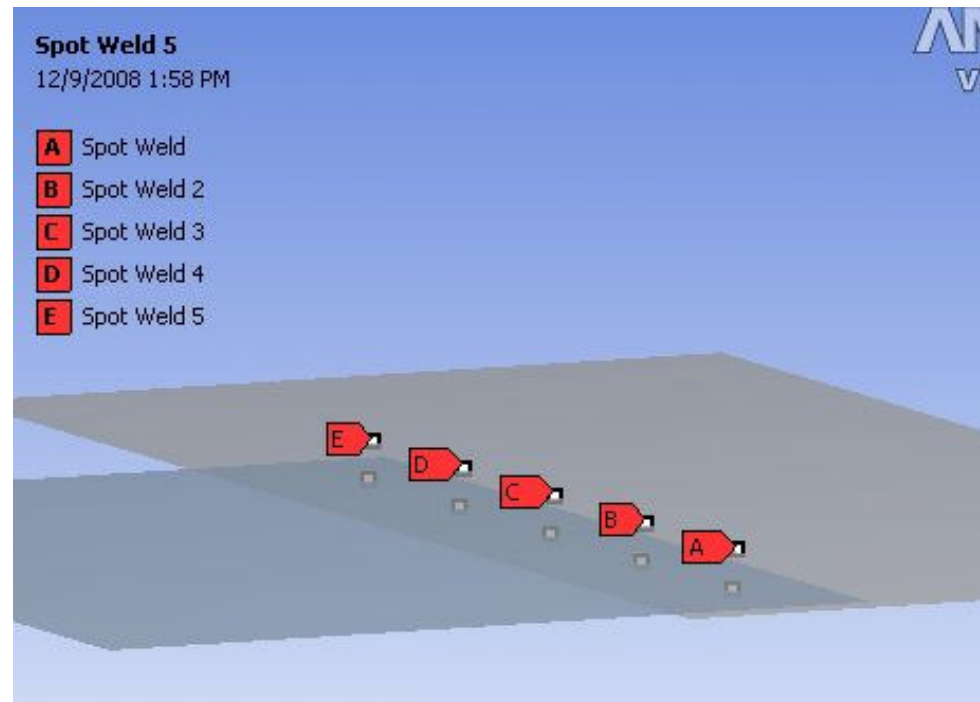



... Assemblies – Contact Summary

- Summary of contact types and options available in Simulation:

Contact Geometry	Solid Body Face (Scope = Contact)	Solid Body Edge (Scope = Contact)	Surface Body Face (Scope = Contact)	Surface Body Edge (Scope = Contact)
Solid Body Face (Scope = Target)	All types	Bonded, No Separation	Bonded, No Separation	Bonded only
	All formulations	All formulations	All formulations	MPC formulation
	Symmetry respected	Asymmetric only	Symmetry respected	Asymmetric only
Solid Body Edge (Scope = Target)	Not supported for solving ¹	Bonded, No Separation	Not supported for solving ¹	Bonded only
		All formulations		MPC formulation
		Asymmetric only		Asymmetric only
Surface Body Face (Scope = Target)	Bonded, No Separation	Bonded, No Separation	Bonded, No Separation	Bonded only
	All formulations	All formulations	All formulations	Augmented Lagrange, Pure Penalty, and MPC formulation
	Symmetry respected	Asymmetric only	Symmetry respected	Asymmetric only
Surface Body Edge (Scope = Target)	Not supported for solving ¹	Bonded only	Not supported for solving ¹	Bonded only
		MPC formulation		Augmented Lagrange, Pure Penalty, and MPC formulation
		Asymmetric only		Asymmetric only

1 – For Face/Edge contact, faces must always be designated as targets and edges must always be designated as contacts

- The “Analysis Settings” details provide general control over the solution process:
- Step Controls:
 - Manual and auto time stepping controls.
 - Specify the number of steps in an analysis and an end “time” for each step.
 - “Time” is a tracking mechanism in static analyses (discussed later).
- Solver Controls:
 - Two solvers available (default program chosen):
 - Direct solver (Sparse solver in ANSYS).
 - Iterative solver (PCG solver in ANSYS).
 - Weak springs:
 - Simulation tries to anticipate under-constrained models.

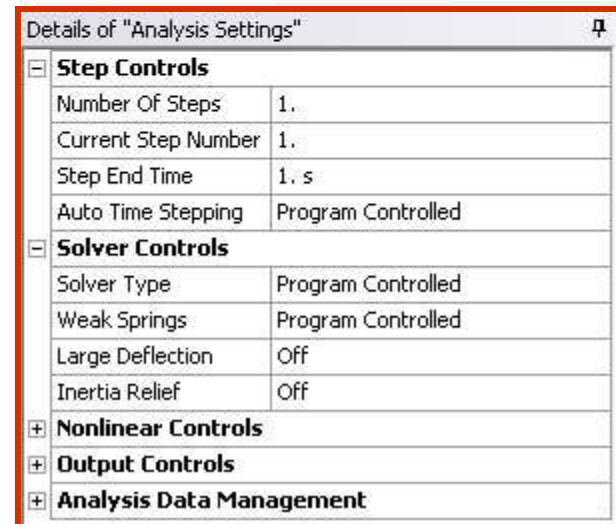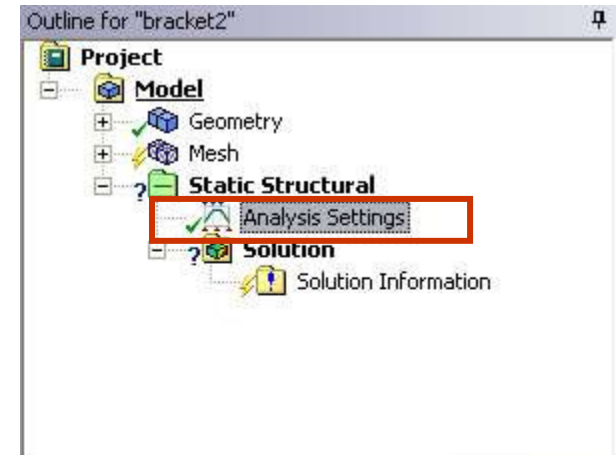

Details of "Analysis Settings"	
Step Controls	
Number Of Steps	1.
Current Step Number	1.
Step End Time	1. s
Auto Time Stepping	Program Controlled
Solver Controls	
Solver Type	Program Controlled
Weak Springs	Program Controlled
Large Deflection	Off
Inertia Relief	Off
Nonlinear Controls	
Output Controls	
Analysis Data Management	

... Analysis Settings – Analysis Data Management

- **Analysis Data Management:**
 - **Solver Files Directory** shows location where associated analysis files will be saved.
 - **Future Analysis:** indicates whether a down stream analysis (e.g. pre-stressed modal) will use the solution. This is set automatically when coupled analyses are configured in the project schematic.
 - **Scratch Solver Files Directory:** temporary directory used during solution.
 - **Save ANSYS db.**
 - **Delete Unneeded Files:** may choose to save all files for future use in Mechanical APDL.
 - **Solver Units:** Active System or manual.
 - **Solver Unit System:** if the above setting is “manual”, you may choose 1 of 8 possible solver unit systems to insure consistency when data is shared with Mechanical APDL (does not affect results/load displays in the GUI).

Details of "Analysis Settings"	
[-] Step Controls	
Number Of Steps	1.
Current Step Number	1.
Step End Time	1. s
Auto Time Stepping	Program Controlled
[-] Solver Controls	
Solver Type	Program Controlled
Weak Springs	Program Controlled
Large Deflection	Off
Inertia Relief	Off
+ Nonlinear Controls	
+ Output Controls	
[-] Analysis Data Management	
Solver Files Directory	D:\Solver_Temp\WB_PGHX6
Future Analysis	Prestressed analysis
Scratch Solver Files Directory	
Save ANSYS db	Yes
Delete Unneeded Files	Yes
Nonlinear Solution	No
Solver Units	Active System
Solver Unit System	nmm


... Analysis Settings – Step Controls

- **Step Controls:**
 - Multiple steps allow a series of static analyses to be set up and solved sequentially.
 - For a static analysis, the end time can be used as a counter/tracker to identify the load steps and substeps.
 - Results can be viewed step by step.
 - Load values for each step can be entered in the “Tabular Data” section provided.

Details of "Analysis Settings"

Step Controls	
Number Of Steps	10.
Current Step Number	4.
Step End Time	13. s
Auto Time Stepping	Program Controlled
Solver Controls	

The time and load value are displayed in the graphics window

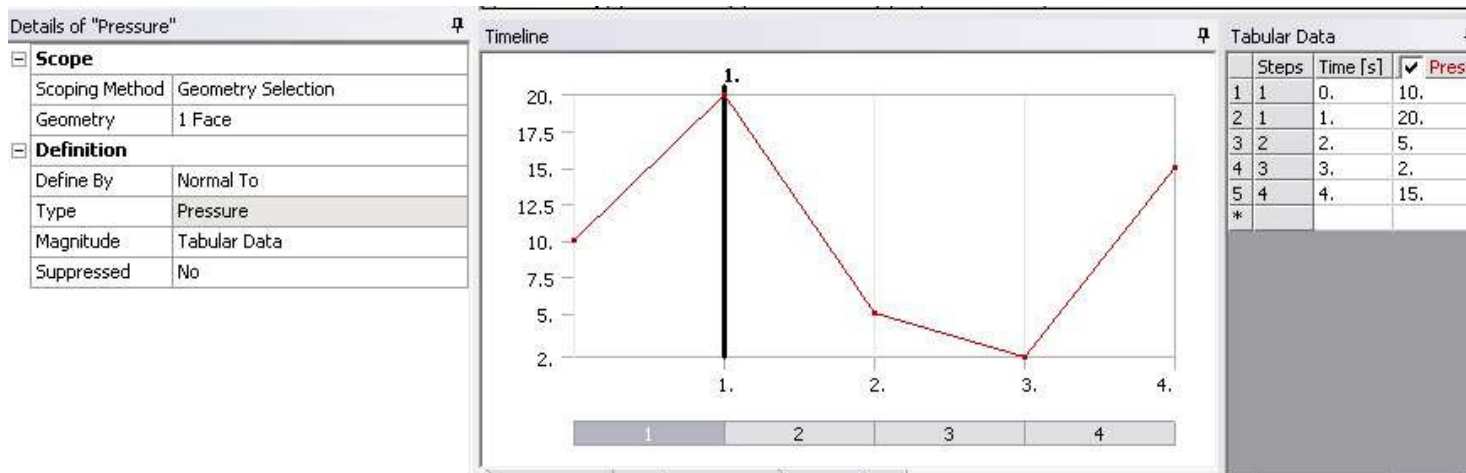

Pressure
 Time: 1. s
 12/28/2006 9:51 AM
 Pressure: 20. MPa

... Multiple Steps

- A summary of all the different steps can be viewed by highlighting “Analysis Type” and then selecting the “Worksheet” tab.

Outline for "bracket2"

- Project
 - Model
 - Geometry
 - Mesh
 - Static Structural
 - Analysis Settings
 - Pressure
 - Force
 - Pressure 2
 - Solution
 - Solution Information

Details of "Analysis Settings"


Properties	Step 1	Step 2	Step 3	Step 4
Step Controls				
Step End Time	1.	2.	3.	4.
Auto Time Stepping	Program Controlled	Program Controlled	Program Controlled	Program Controlled
Nonlinear Controls				
Force Convergence	Program Controlled	Program Controlled	Program Controlled	Program Controlled
Moment Convergence	Program Controlled	Program Controlled	Program Controlled	Program Controlled
Displacement Convergence	Program Controlled	Program Controlled	Program Controlled	Program Controlled
Rotation Convergence	Program Controlled	Program Controlled	Program Controlled	Program Controlled
Line Search	Program Controlled	Program Controlled	Program Controlled	Program Controlled
Output Controls				
Calculate Stress	Yes	Yes	Yes	Yes
Calculate Strain	Yes	Yes	Yes	Yes
Calculate Results At	All Time Points	All Time Points	All Time Points	All Time Points

Genetrv \ **Worksheet** \ Print Preview \ Report Preview /

... Multiple Steps



- Results for each individual step can be viewed after the solution by selecting the desired step and RMB > "Retrieve This Result".

Select desired step and RMB to retrieve result

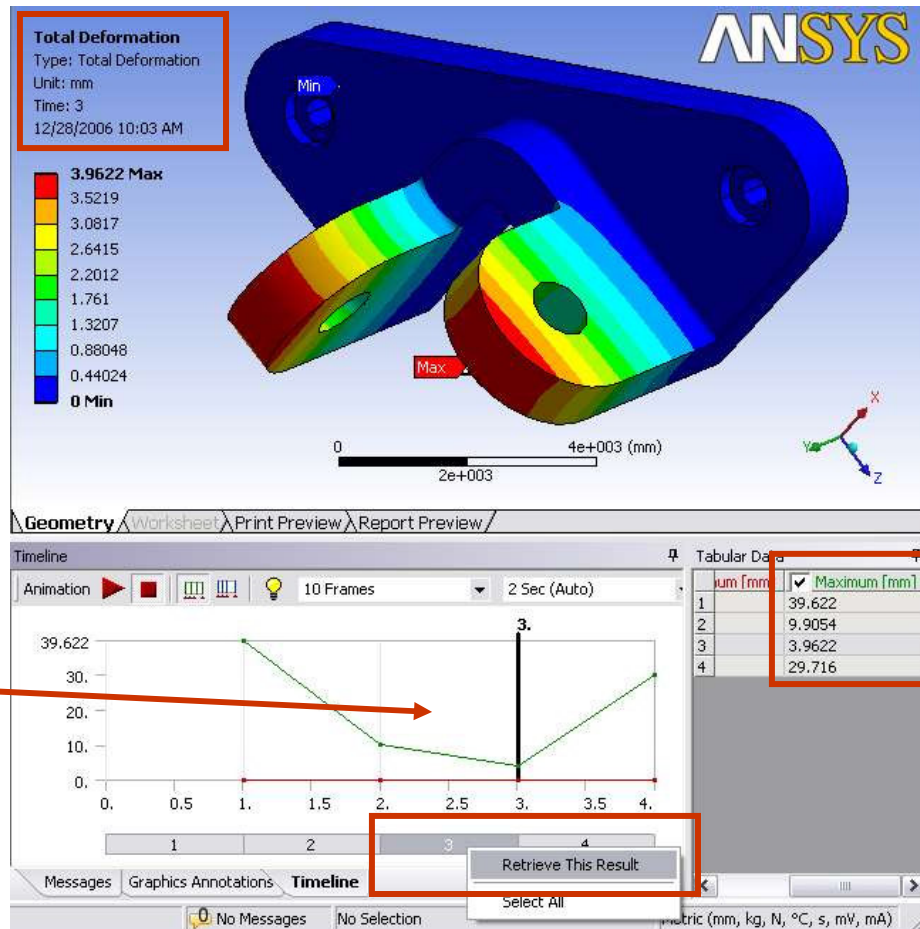

D. Loads and Supports

- Loads and supports are thought of in terms of the degrees of freedom (DOF) available for the elements used.
- In solids the DOF are x, y and z translations (for shells we add rotational DOF rotx, roty and rotz).
- Supports, regardless of actual names, are always defined in terms of DOF.
- For example a “Frictionless Support” applied to the Z surface of the block shown would indicate that the Z degree of freedom is no longer free (all other DOF are free).

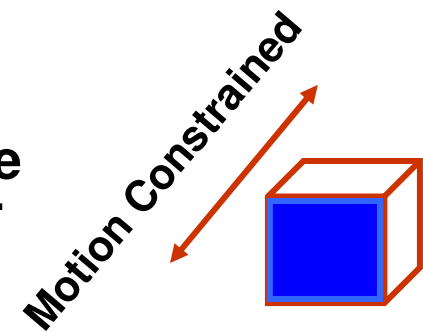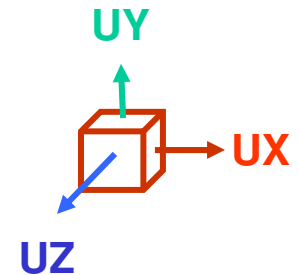


Frictionless surface

. . . Loads and Supports




- **Load types:**
 - **Inertial loads:**
 - These loads act on the entire system.
 - Density is required for mass calculations.
 - These are only loads which act on defined Point Masses.
 - **Structural Loads:**
 - Forces or moments acting on parts of the system.
 - **Structural Supports:**
 - Constraints that prevent movement on certain regions.
 - **Thermal Loads:**
 - The thermal loads which result in a temperature field causing thermal expansion/contraction in the model.

- Loads and supports having a direction component can be defined in global or local coordinate systems:
 - In the Details view, change “Define By” to “Components”. Then, select the appropriate CS from the pull-down menu.

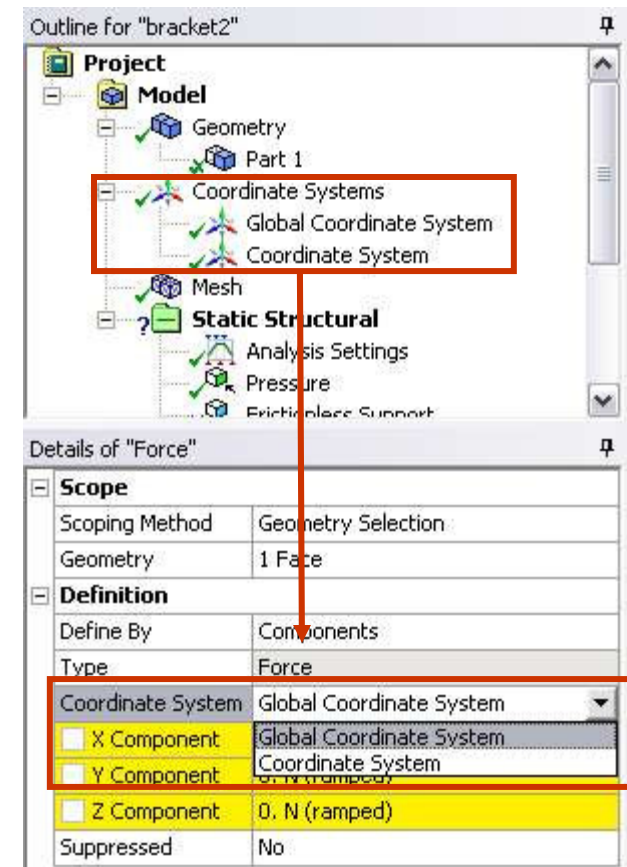

Load	Supports Coordinate Systems
Acceleration	No
Standard Earth Gravity	Yes
Rotational Velocity	Yes
Force	Yes
Remote Force	Location of Origin Only
Bearing Load	Yes
Moment	Yes
Given Displacement	Yes




... Acceleration & Gravity


- **Acceleration:**  Acceleration
 - Acts on entire model in length/time² units.
 - Acceleration can be defined by Components or Vector.
 - Body will move in the opposite direction of the applied acceleration.
- **Standard Earth Gravity:**  Standard Earth Gravity
 - Value applied coincides with selected unit system.
 - Standard Earth Gravity direction is defined along one of three global or local coordinate system axes.
 - Body will move in the same direction of the applied gravity.
- **Rotational velocity:**  Rotational Velocity
 - Entire model rotates about an axis at a given rate.
 - Define by vector or component method.
 - Input can be in radians per second (default) or RPM.


... Forces and Pressures

- **Pressure loading:**  Pressure
 - Applied to surfaces, acts normal to the surface.
 - Positive value into surface, negative value acts out of surface.
 - Units of pressure are in force per area.
- **Force loading:**  Force
 - Forces can be applied on vertices, edges, or surfaces.
 - The force will be *evenly distributed on all entities*. Units are $\text{mass} \cdot \text{length} / \text{time}^2$.
 - Force can be defined via vector or component methods.

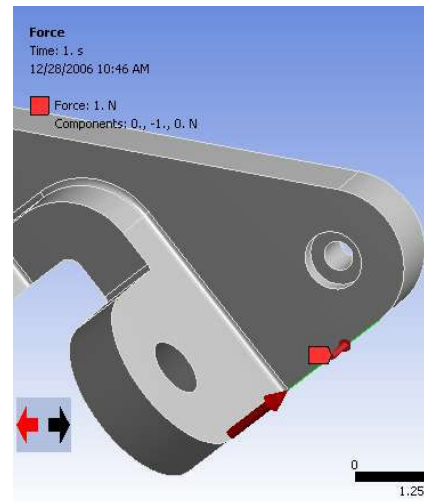


... Hydrostatic Pressure


- **Hydrostatic Pressure:**  Hydrostatic Pressure
 - Applies a linearly varying load to a surface (solid or shell) to mimic fluid force acting on the structure.
 - Fluid may be contained or external.
 - User specifies:
 - Magnitude and direction of acceleration.
 - Fluid Density.
 - Coordinate system representing the free surface of the fluid.
 - For Shells, a Top/Bottom face option is provided.

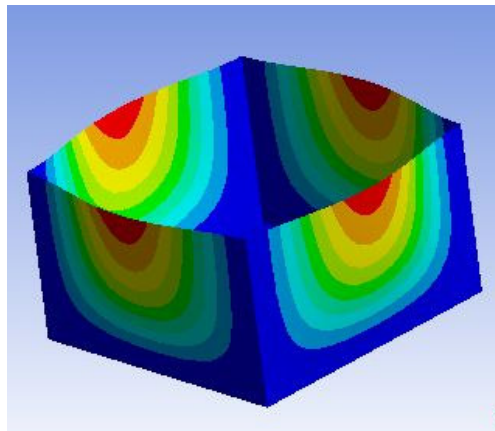

Internal

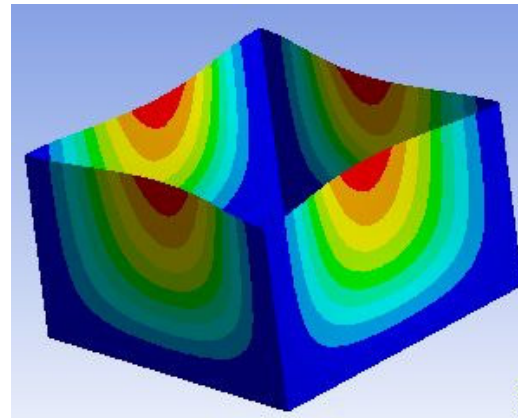


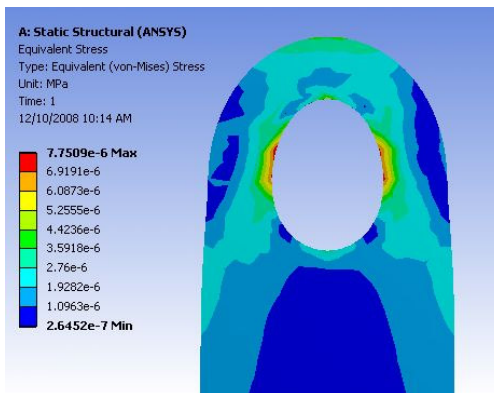
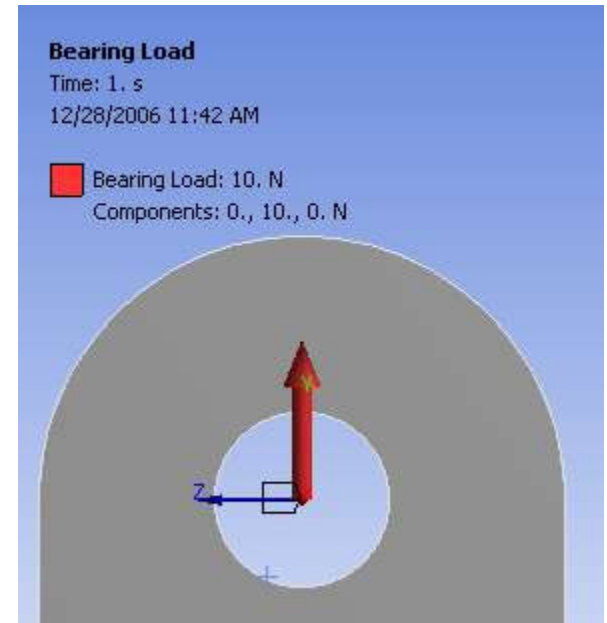
External

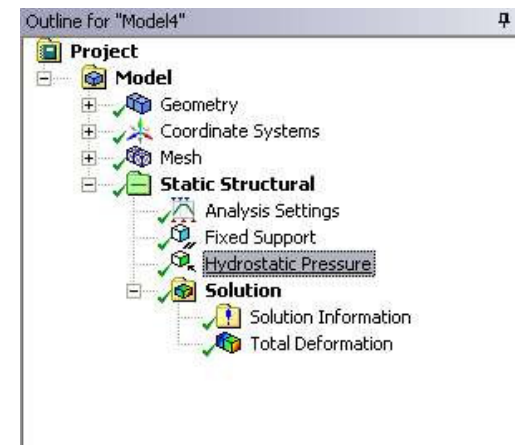


Details of "Hydrostatic Pressure"

Scope	
Scoping Method	Geometry Selection
Geometry	5 Faces
Shell Face	Top
Hydrostatic Acceleration	
Define By	Vector
Magnitude	9.8 m/s ²
Direction	Click to Change
Definition	
Type	Hydrostatic Pressure
Suppressed	No
Fluid Density	1000. kg/m ³
Free Surface Location	
Coordinate System	Coordinate System
X Coordinate	0. m
Y Coordinate	0. m
Z Coordinate	0. m
Location	Click to Change


- **Bearing Load (force):**  Bearing Load
 - Force component distributed on compressive side using projected area.
 - Axial components are not allowed.
 - Use only one bearing load per cylindrical surface.
 - If the cylindrical surface is split be sure to select both halves of cylindrical surface when applying this load.
 - Bearing load can be defined via vector or component method.




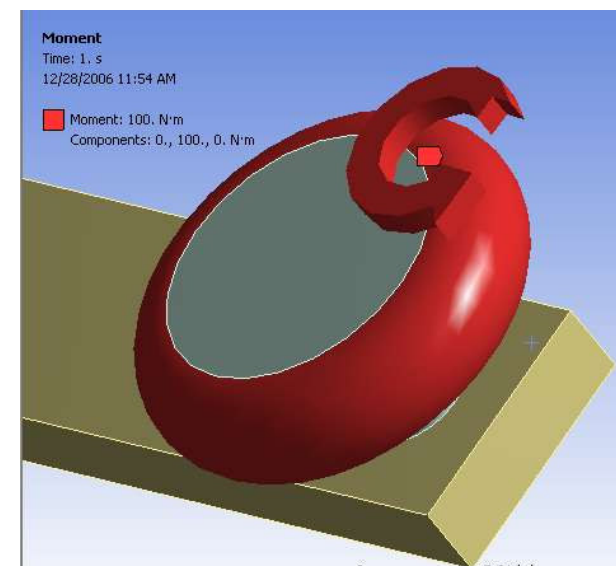
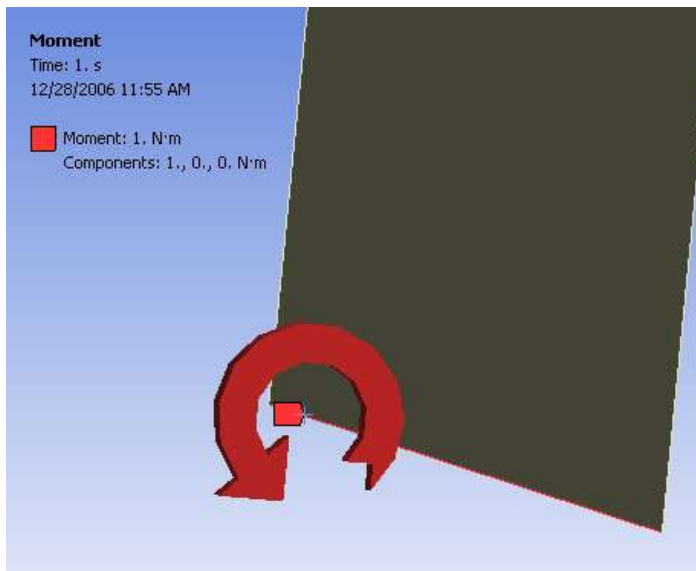
Bearing Load

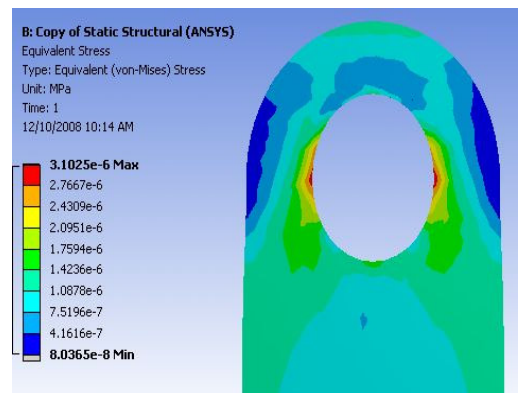


Force Load

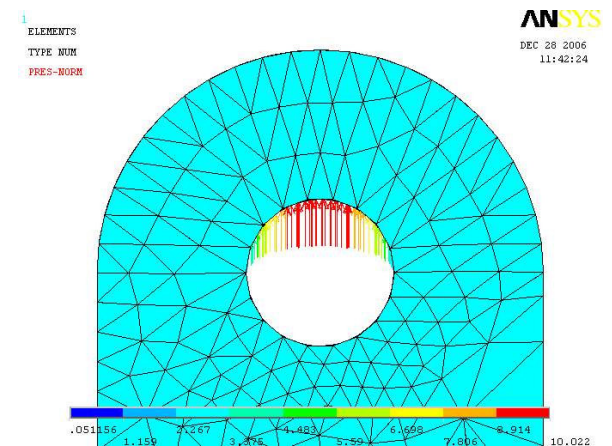

- **Moment Loading :**  Moment
 - For solid bodies moments can be applied on a surface only.
 - If multiple surfaces are selected, the moment load is evenly distributed.
 - Vector or component method can be employed using the right hand rule.
 - For surface bodies a moment can be applied to a vertex, edge or surface.
 - Units of moment are in Force*length.



- **Remote Force Loading** :  Remote Force
 - Applies an offset force on a surface or edge of a body.
 - The user supplies the origin of the force (geometry or coordinates).
 - Can be defined using vector or component method.
 - Applies an equivalent force and moment on the surface.
- **Example:** 10 inch beam with a 1 lbf remote force scoped to the end of the beam. Remote force is located 20 inches from the fixed support.

A: Static Structural (ANSYS)


Static Structural

Time: 1. s

2/19/2009 7:47 AM


A Remote Force: 1. lbf

B Fixed Support

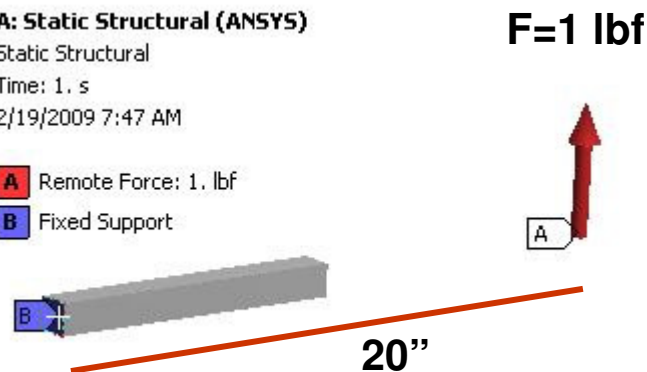


Details of "Moment Reaction"	
Options	
Results	
<input type="checkbox"/> X Axis	20. lbf·in
<input type="checkbox"/> Y Axis	3.488e-009 lbf·in
<input type="checkbox"/> Z Axis	-2.1246e-007 lbf·in
<input type="checkbox"/> Total	20. lbf·in

Moment Reaction


- **Bolt Pretension:**  Bolt Pretension
 - Applies a pretension load to a cylindrical section using:
 - Pretension load (force)
 - OR
 - Adjustment (length)
 - For body loading a local coordinate system is required (preload in z direction).
 - Automatic two loadstep solution:
 - LS1: pretension load, boundary conditions and contact conditions are applied.
 - LS2: relative motion of the pretension section is fixed and external loads are applied.
 - For sequenced loading additional options are available (see next page)

Details of "Bolt Pretension"	
Scope	
Scoping Method	Geometry Selection
Geometry	1 Face
Definition	
Type	Bolt Pretension
Suppressed	No
Define By	Load
<input type="checkbox"/> Preload	1000. N

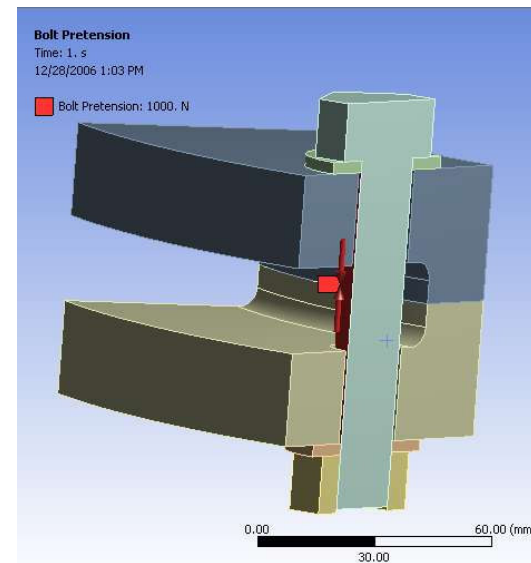

... Bolt Pretension – Sequenced Simulation


- The “Define By” field in the details view provides the following options for sequence loading:
 - Load or Adjustment: as defined on previous page.
 - Lock : Fixes all displacements (load applied and held).
 - Open : Leaves the pretension load “open” (no pretension).

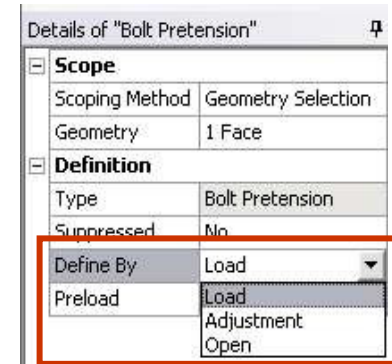


Steps	Define By	Preload [N]	Adjustment [mm]
1.	Load	0.	N/A
2.	Load	0.	N/A
3.	Load	0.	N/A
4.	Load	0.	N/A




- Bolt Load Tips:
 - 3D simulations only.
 - Cylindrical surfaces or bodies only.
 - A refined mesh is recommended (at least 2 elements in axial direction).


... Line Pressure

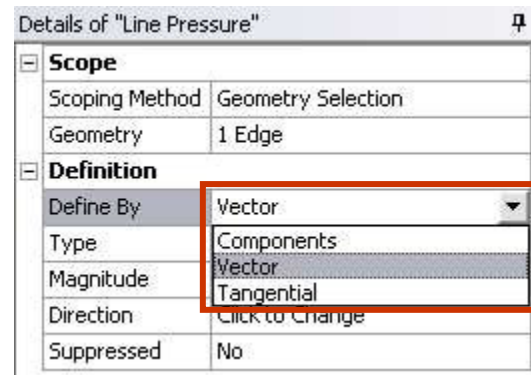
- **Line Pressure loading :**  Line Pressure
 - Applies a distributed force on one edge only for 3-D simulations, using force density loading.
 - Units are in force/length.
 - Can be defined by :
 - Magnitude and Vector
 - Magnitude and component direction (global or local coordinate systems)
 - Magnitude and tangential




... Supports

- **Fixed Support :**  Fixed Support
 - Constraints all degrees of freedom on vertex, edge, or surface
 - Solid bodies: constrains x, y, and z
 - Surface and line bodies: constrains x, y, z, rotx, roty and rotz
- **Given Displacement :**  Displacement
 - Applies known displacement on vertex, edge, or surface
 - Allows for imposed translational displacement in x, y, and z (in user-defined Coordinate System)
 - Entering “0” means that the direction is *constrained*, leaving the direction blank means the direction is free.
- **Elastic Support :**  Elastic Support
 - Allows faces/edges to deform according to a spring behavior.
 - Foundation stiffness is the pressure required to produce unit normal deflection of the foundation

Details of "Displacement" 

Scope	
Scoping Method	Geometry Selection
Geometry	1 Face
Definition	
Define By	Components
Type	Displacement
X Component	0. mm (ramped) 
Y Component	Free
Z Component	Free
Suppressed	No

Details of "Elastic Support" 



Scope	
Scoping Method	Geometry Selection
Geometry	1 Face
Definition	
Type	Elastic Support
Suppressed	No
Foundation Stiffness	1. N/mm ³

... Supports

- **Frictionless Support:**



- Applies constraints (fixes) in normal direction on surfaces.
- For solid bodies, this support can be used to apply a ‘symmetry’ boundary condition.
- Examples . . .

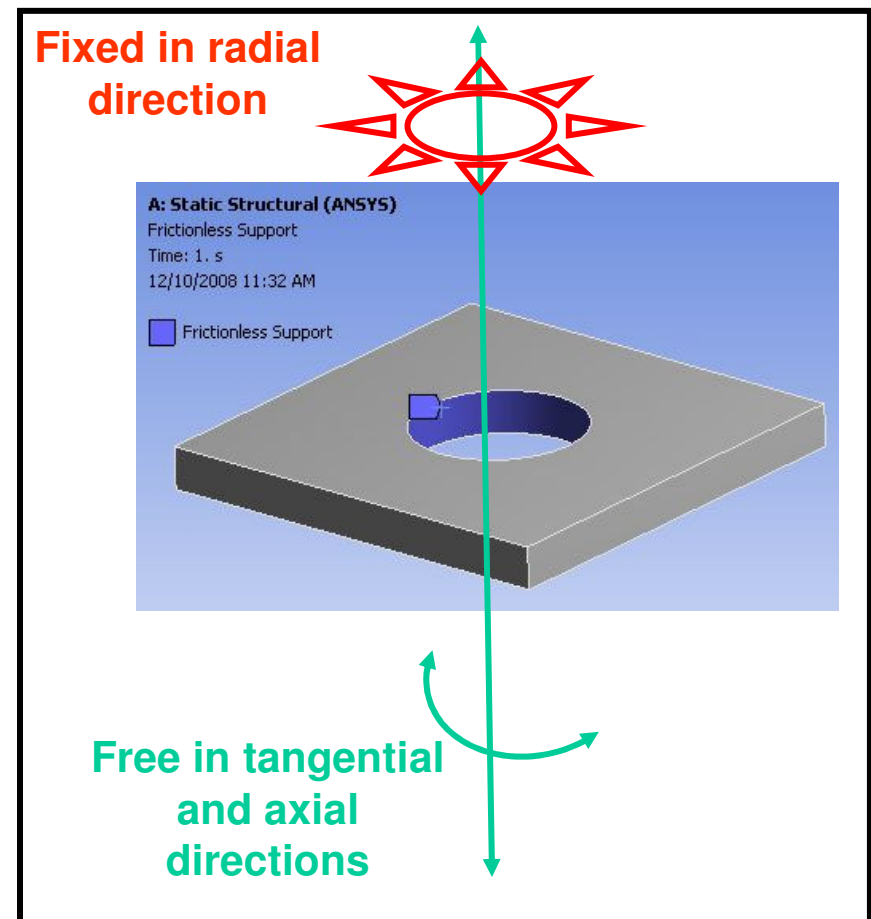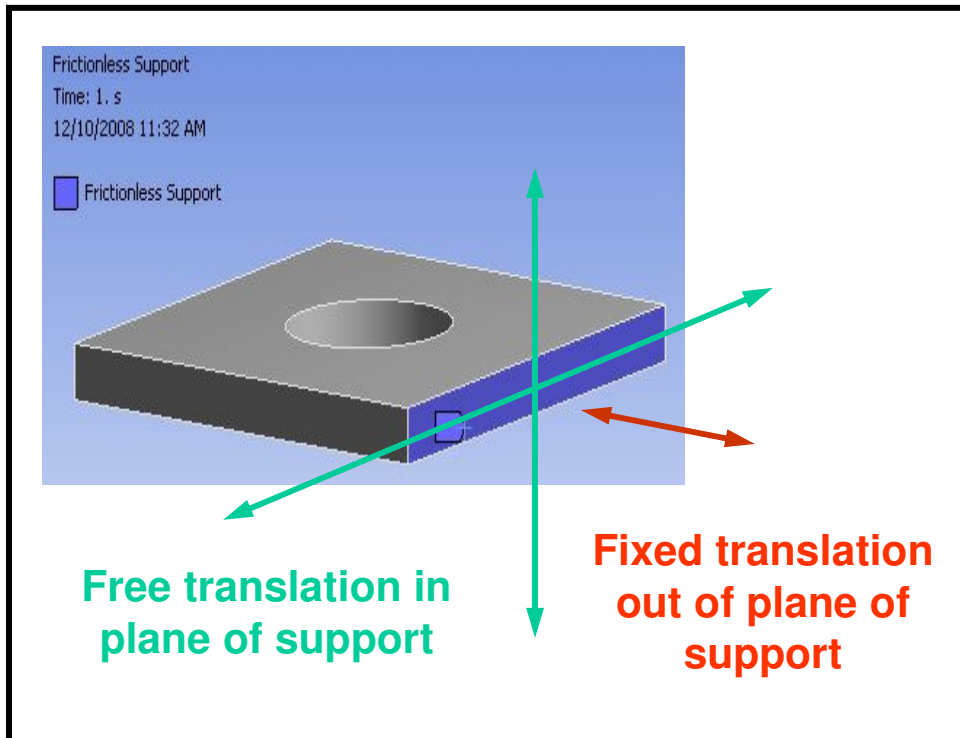


... Supports


- **Cylindrical Support:**




- Provides individual control for axial, radial, or tangential constraints.
- Applied on cylindrical surfaces.

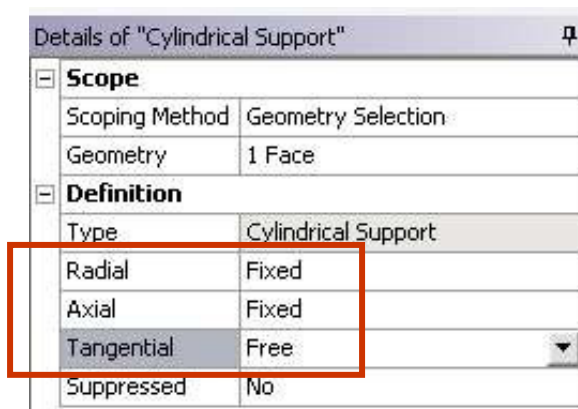


Example . . .

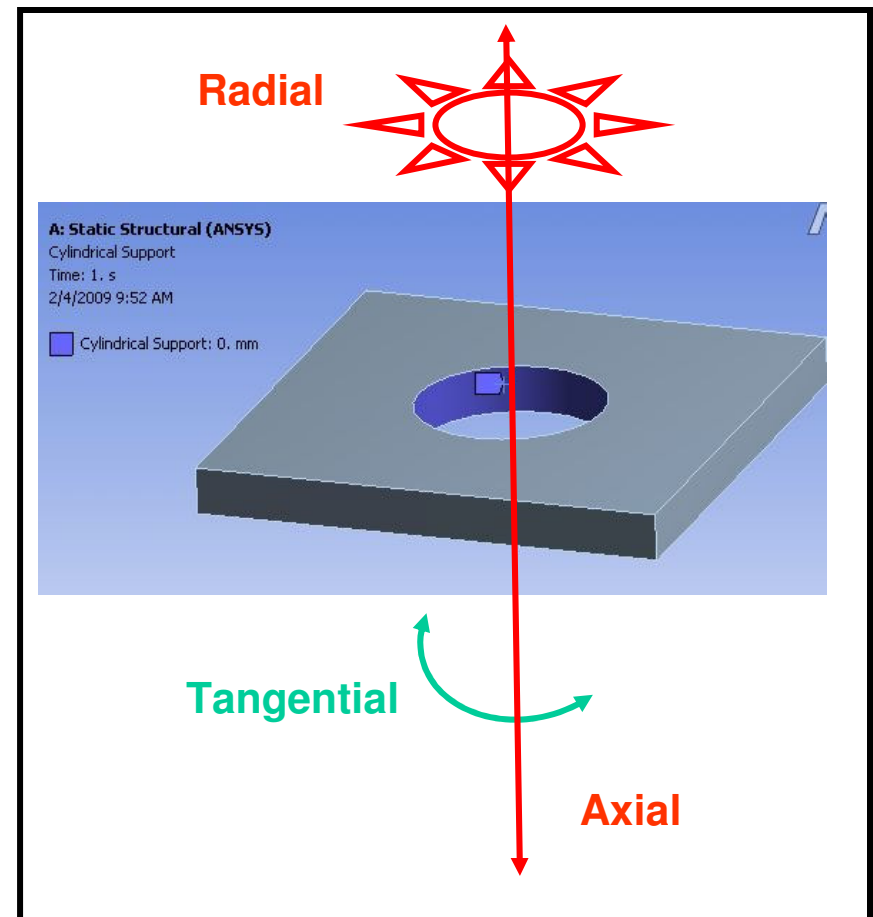



... Supports (Solid Bodies)

- **Compression Only Support :**  Compression Only Support
 - Applies a constraint in the normal *compressive* direction only.
 - Can be used on a cylindrical surface to model a pin, bolt, etc..
 - *Requires an iterative (nonlinear) solution.*

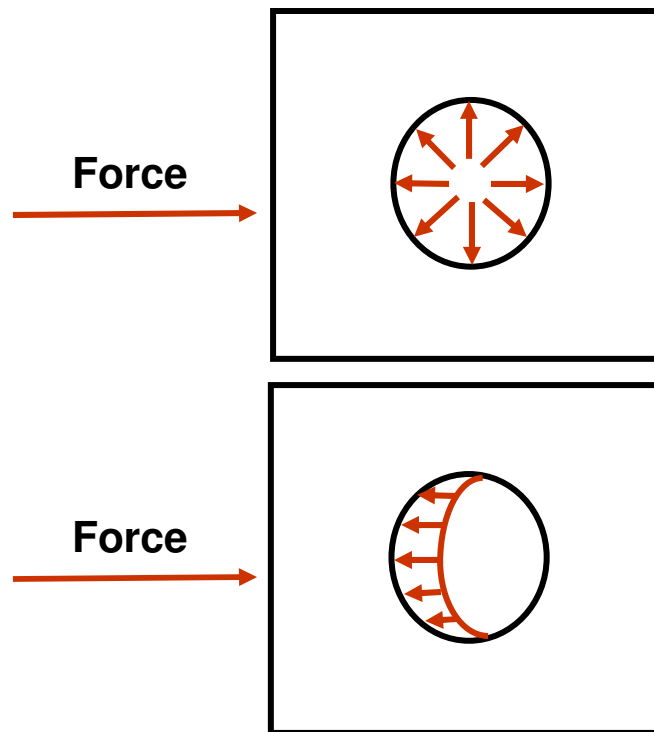




Fixed

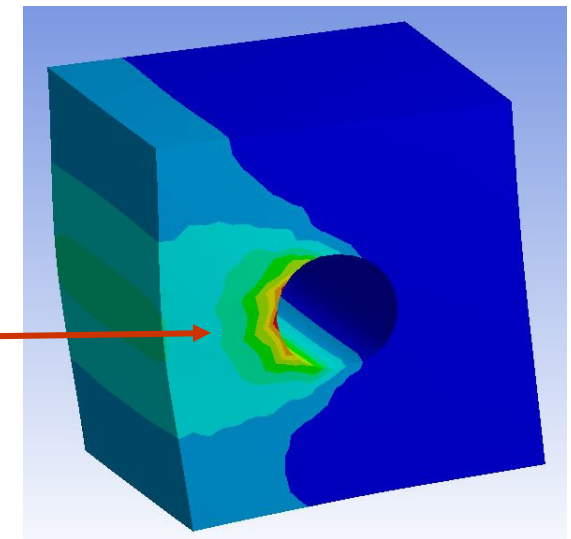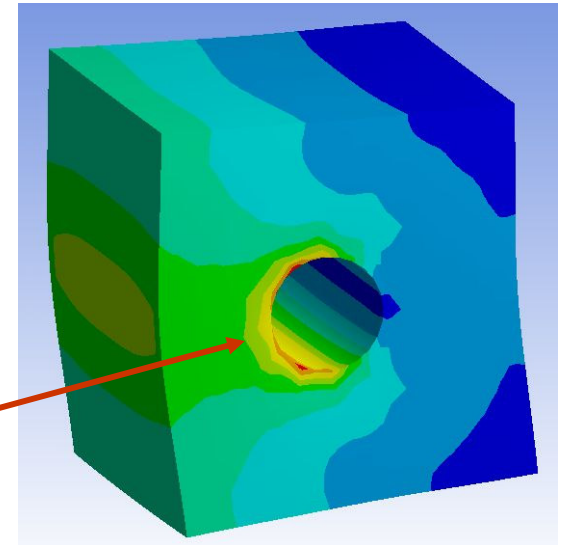Compression Only




... Supports (Line/Surface Bodies)

- **Simply Supported** :  Simply Supported
 - Can be applied on edge or vertex of surface or line bodies
 - Prevents all translations but all rotations are free
- **Fixed Rotation** :  Fixed Rotation
 - Can be applied on surface, edge, or vertex of surface or line bodies
 - Constrains rotations but translations are free

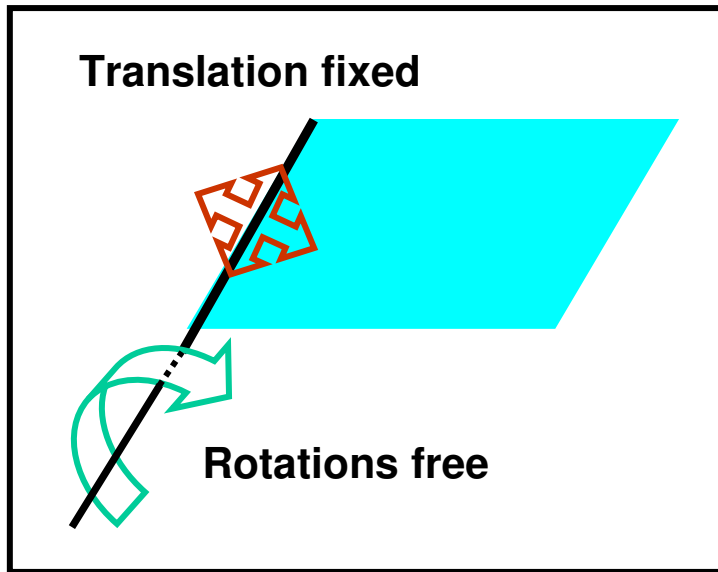

Simply Supported Edge

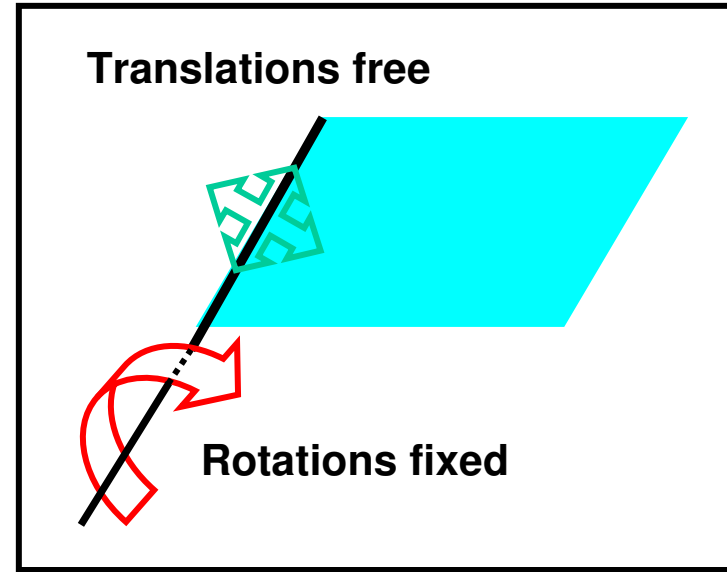

Fixed Rotation Edge


Static Structural Analysis

... Thermal Loading



Training Manual

- **Thermal condition :**
 - **Applies a uniform temperature in a structural analysis.**
 - **Appears under “Loads” in structural analysis.**
 - **A reference temperature must be provided (see next slide).**

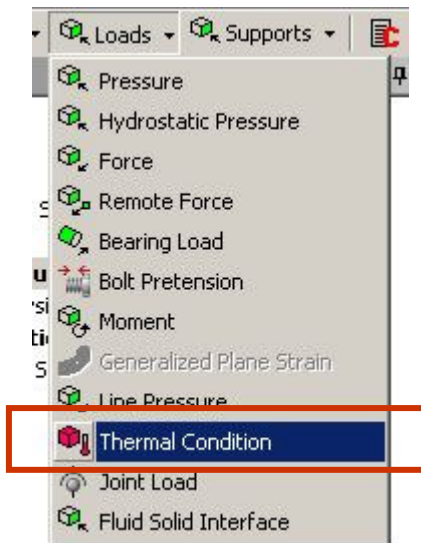

Scope	
Scoping Method	Geometry Selection
Geometry	1 Body
Definition	
Type	Thermal Condition
<input checked="" type="checkbox"/> Magnitude	100. °C (ramped)
Suppressed	No

Static Structural Analysis

... Thermal Loading






Training Manual

- A temperature differential can cause thermal expansion or contraction in a structure:

- Thermal strains (ϵ_{th}) are calculated as follows:

$$\epsilon_{th}^x = \epsilon_{th}^y = \epsilon_{th}^z = \alpha(T - T_{ref})$$


- α = thermal expansion coefficient (CTE material property).
- T_{ref} = reference temperature (thermal strains are zero).
- T = applied temperature (see previous slide).
- Reference temperature is defined in the environment branch (global) or as a property of individual bodies.

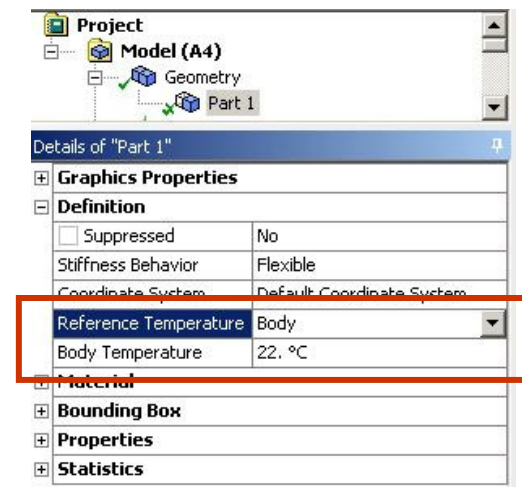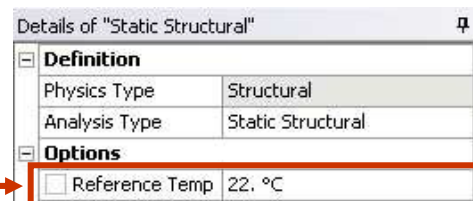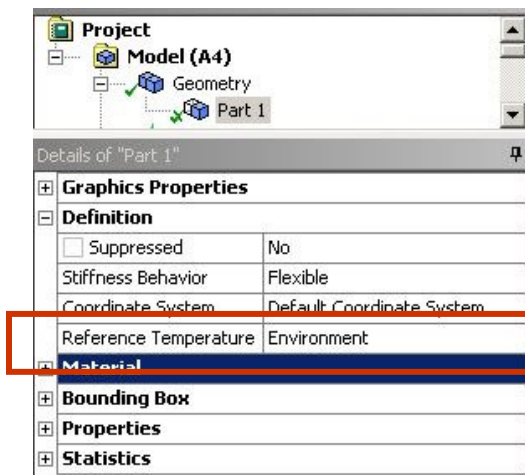

Static Structural Analysis



... Solving the Model

- To solve the model click on the “Solve” button on the Standard Toolbar.
 - Two processors used if present (default).
 - To set the number use, “Tools > Solve Process Settings”.

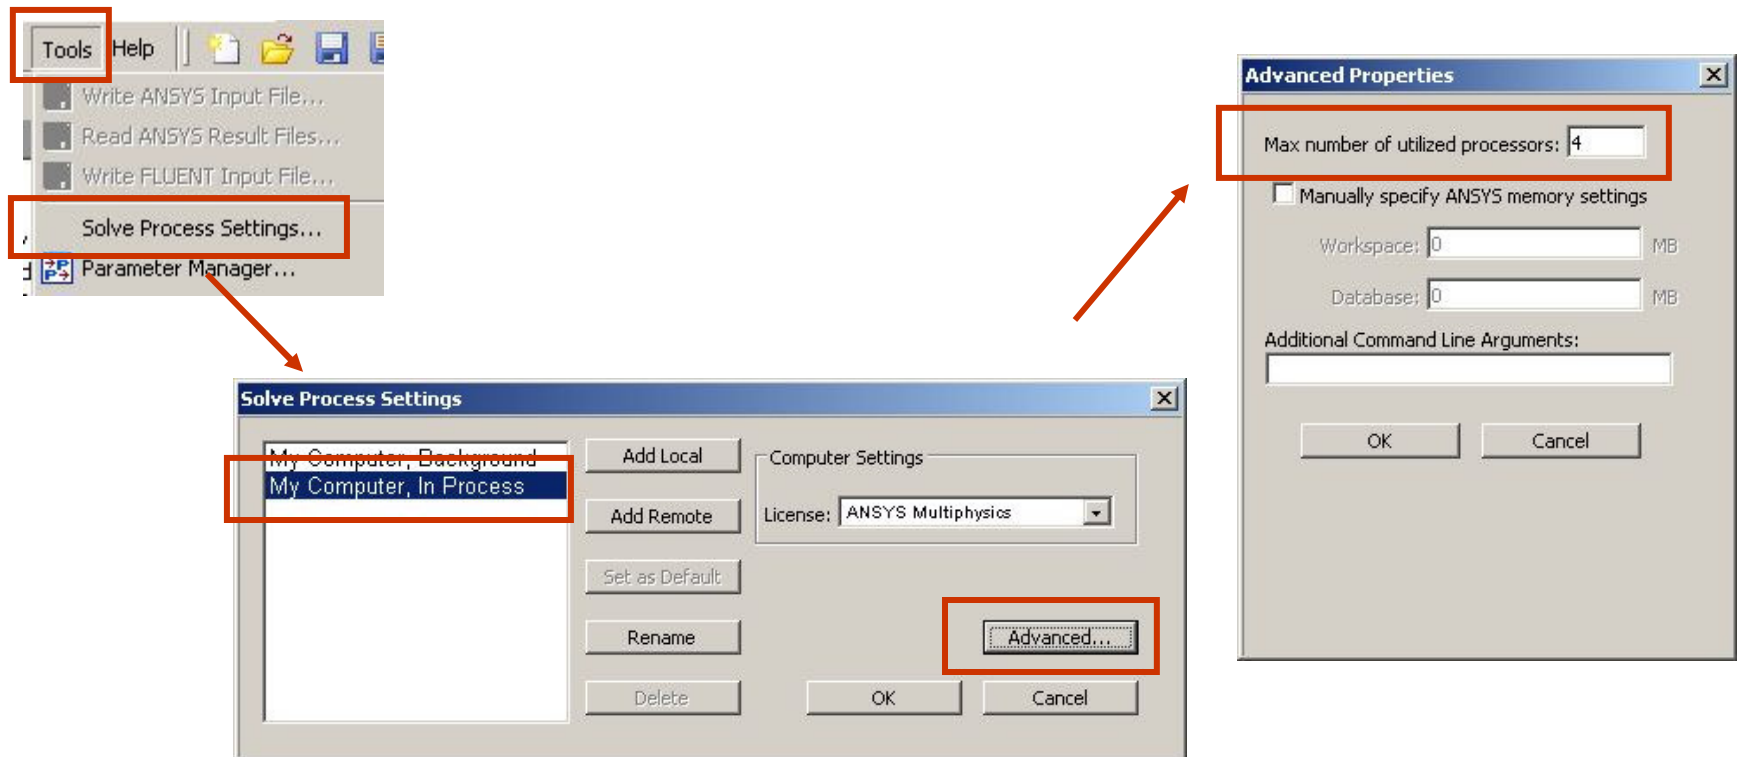


E. Workshop 4.1 – Linear Structural Analysis

- Workshop 4.1 – Linear Structural Analysis
- **Goal:**
 - A 5 part assembly representing an impeller type pump is analyzed with a 100N preload on the belt.

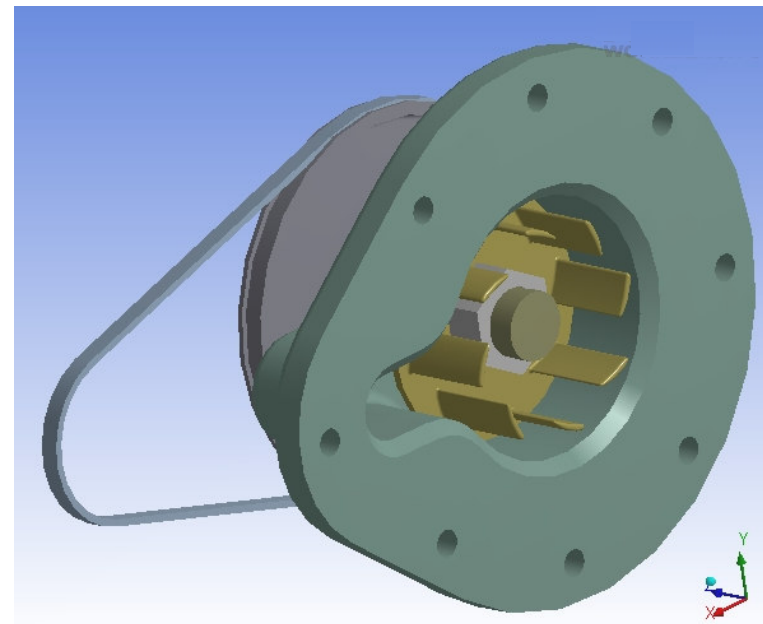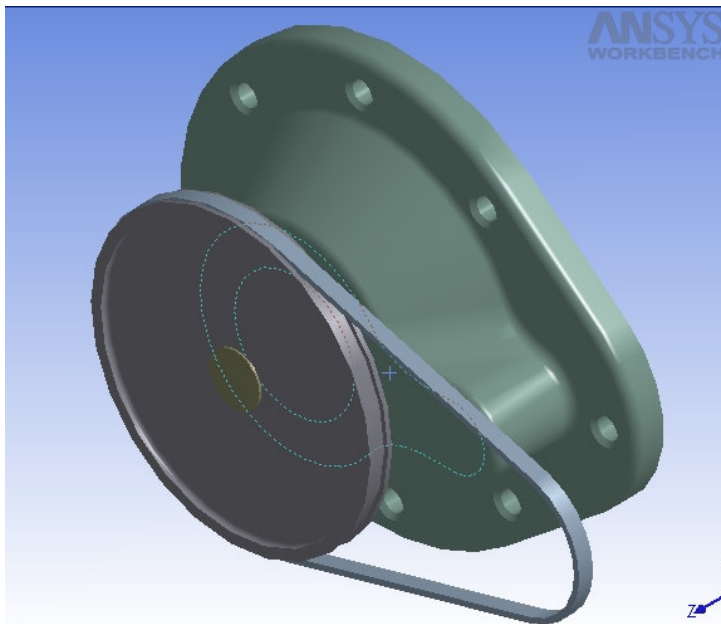

F. Results and Postprocessing

- **Numerous structural results are available:**
 - Directional and total deformation.
 - Components, principal, or invariants of stresses and strains.
 - Contact output.
 - Reaction forces.
- **In Simulation, results may be requested before or after solving.**
 - If you solve a model then request results afterwards, click on the “Solve” button , and the results will be retrieved.
 - A new solution is not required.


Static Structural Analysis

... Plotting Results



Training Manual



- Contour and vector plots are usually shown on the deformed geometry.
- Use the Context Toolbar to change settings.

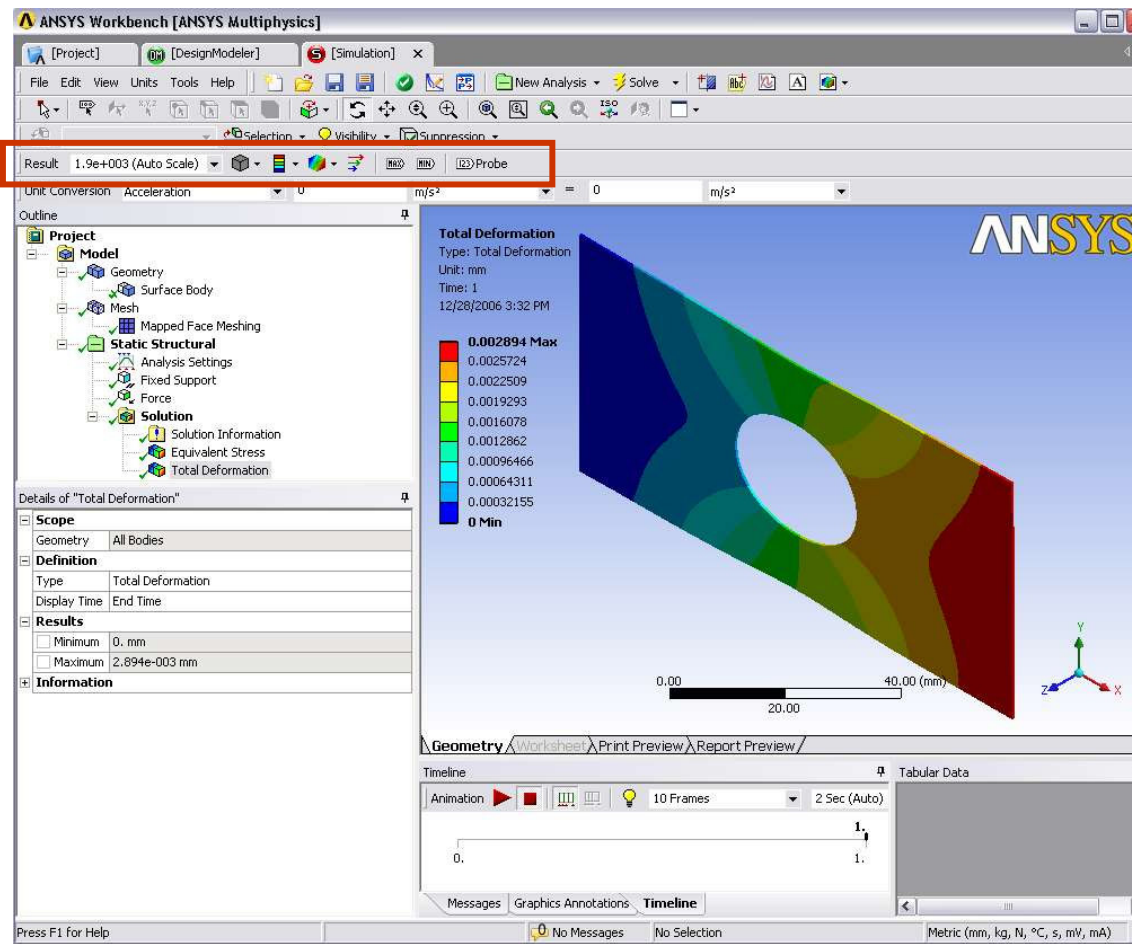

- The deformation of the model can be plotted:
 - Total deformation is a scalar quantity:

$$U_{total} = \sqrt{U_x^2 + U_y^2 + U_z^2}$$



- The x, y, and z components of deformation can be requested under “Directional”, in global or local coordinates.
- Vector plots of deformation are available (see below).

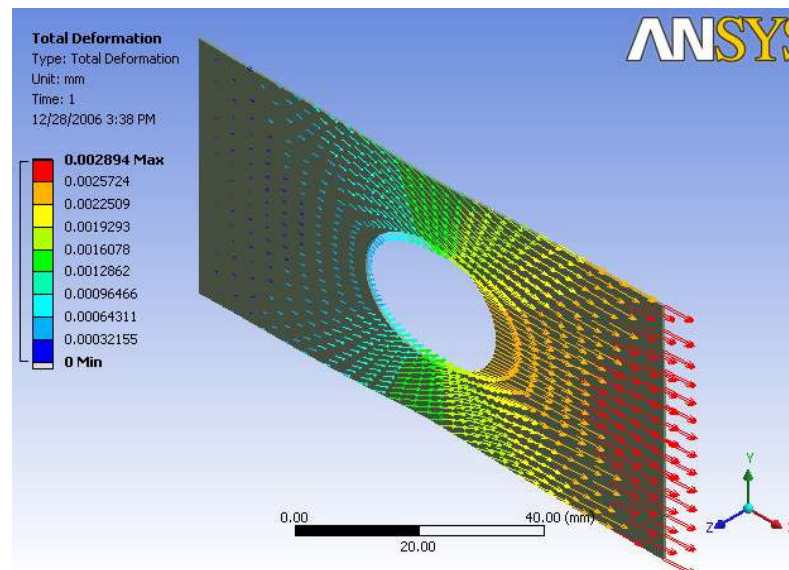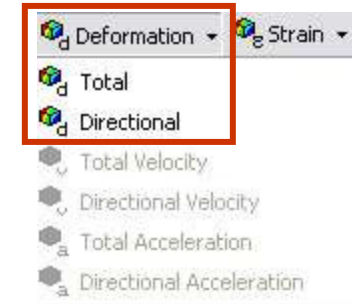

... Stresses and Strains

- **Stresses and strains:**

- **Stresses and (elastic) strains have six components (x, y, z, xy, yz, xz) while thermal strains have three components (x, y, z)**
- **For stresses and strains, components can be requested under “Normal” (x, y, z) and “Shear” (xy, yz, xz). For thermal strains, (x, y, z) components are under “Thermal.”**
- **Principal stresses are always arranged such that $s_1 > s_2 > s_3$**
- **Intensity is defined as the largest of the absolute values**
 - $s_1 - s_2, s_2 - s_3$ or $s_3 - s_1$

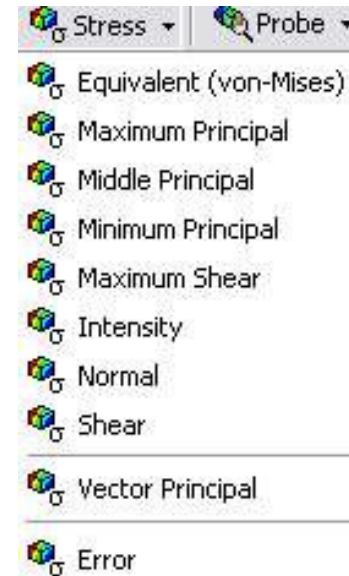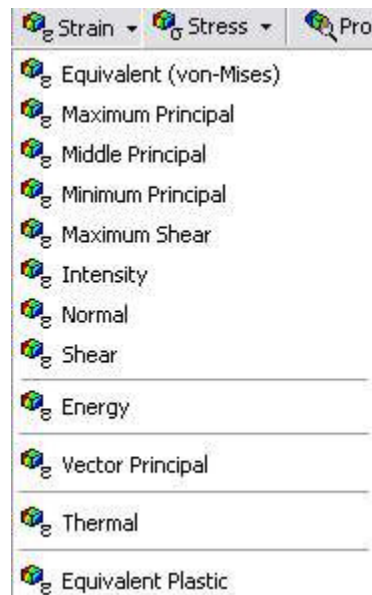

... Stress Tools

- **Safety Factors (choose from 4 failure theories):**



- **Ductile Theories:**

- Maximum Equivalent Stress
- Maximum Shear Stress

- **Brittle Theories:**

- Mohr-Coulomb Stress
- Maximum Tensile Stress

- **Within each stress tool safety factor, safety margin and stress ratio can be plotted.**

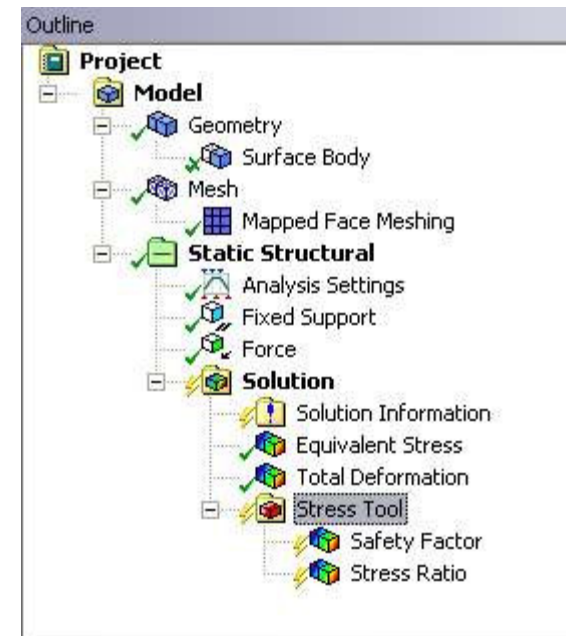
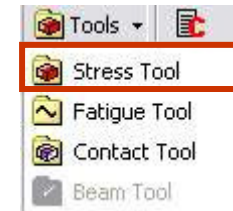


Details of "Stress Tool"


Definition	
Theory	Max Equivalent Stress
Stress Limit Type	Tensile Yield Per Material

... Contact Results

- Contact results are requested via a “Contact Tool” under the Solution branch.

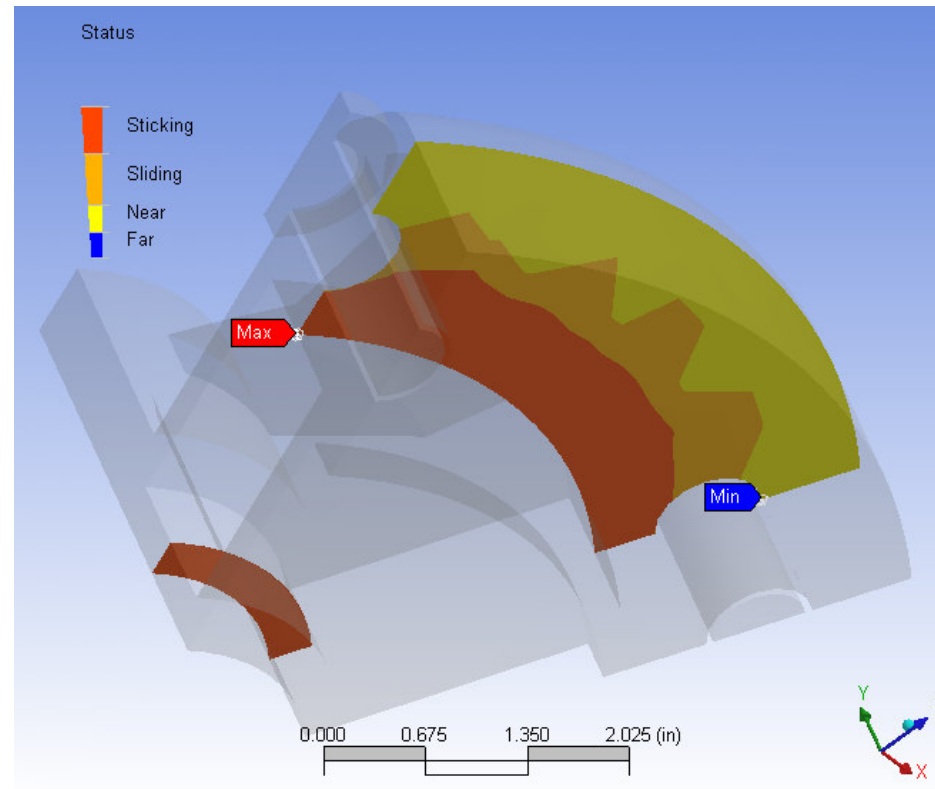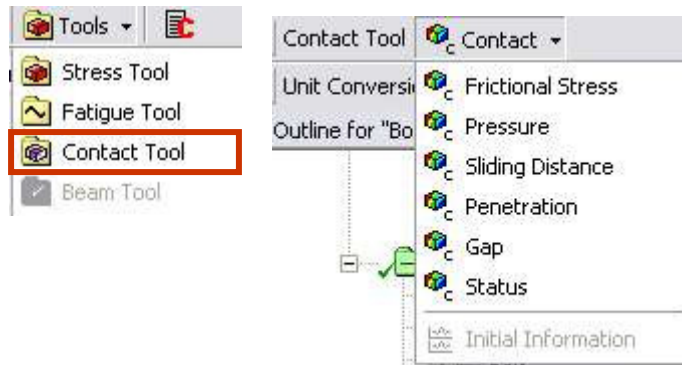

- **Select the contact region(s) for the Contact Tool (2 methods):**
 - 1. Worksheet view (details):** select contact regions from the list.
 - Contact, target or both sides can be selected.
 - 2. Geometry:** select contact regions on the graphics screen.

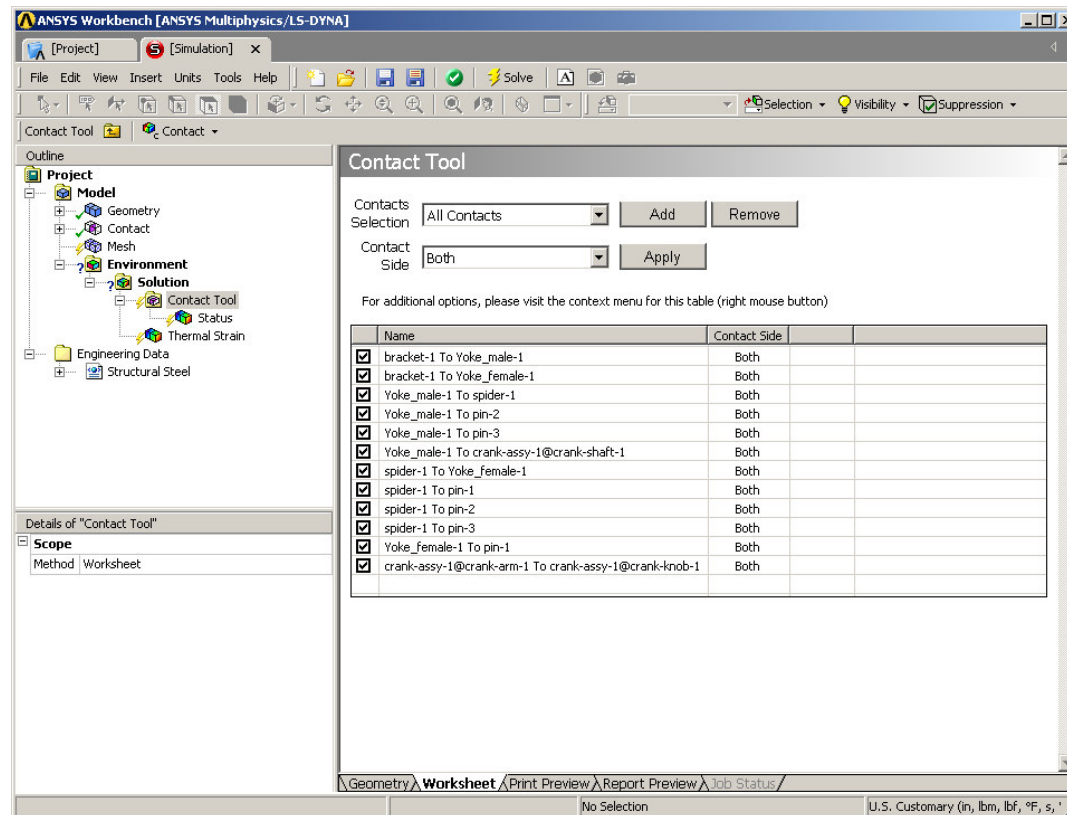


Static Structural Analysis

User Defined Results



Training Manual

- In addition to the standard result items one can insert “user defined” results.
- These results can include mathematical expressions and can be combinations of multiple result items.
- Define in 2 ways:
 - Select “User Defined Result” from the solution context menu



- OR - From the Solution Worksheet highlight result > RMB > Create User Defined Result.


User Defined Result Expressions

Type	Data Type	Data Style	Component	Expression	Output Unit
U	Nodal	Scalar	X	UX	Displacement
U	Nodal	Scalar	Y	UY	Displacement
U	Nodal	Scalar	Z	UZ	Displacement
U	Nodal	Scalar	SUM	USUM	Displacement
U	Nodal	Vector	VECTORS	UVECTORS	Displacement
S	Element Nodal	Scalar			Stress
S	Element Nodal	Scalar			Stress
S	Element Nodal	Scalar			Stress

Create User Defined Result


... User Defined Results

- Details allow an expression using various basic math operations as well as square root, absolute value, exponent, etc..
- User defined results can be labelled with a user “Identifier”.
- Result legend contains identifier and expression.

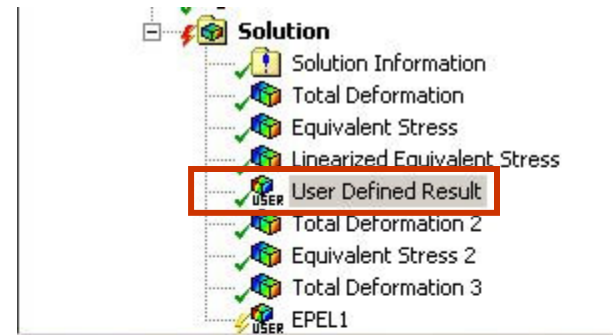

Details of "User Defined Result"

Scope	
Scoping Method	Geometry Selection
Geometry	All Bodies
Definition	
Type	User Defined Result
Expression	$= \sqrt{UX^2+UY^2+UZ^2}$
Input Unit System	Metric (mm, kg, N, s, mV, mA)
Output Unit	Displacement
By	Time
Display Time	Last
Coordinate System	Global Coordinate System
Calculate Time History	Yes
Identifier	My_DSUm
Results	
<input type="checkbox"/> Minimum	0. mm
<input type="checkbox"/> Maximum	2.0021e-002 mm

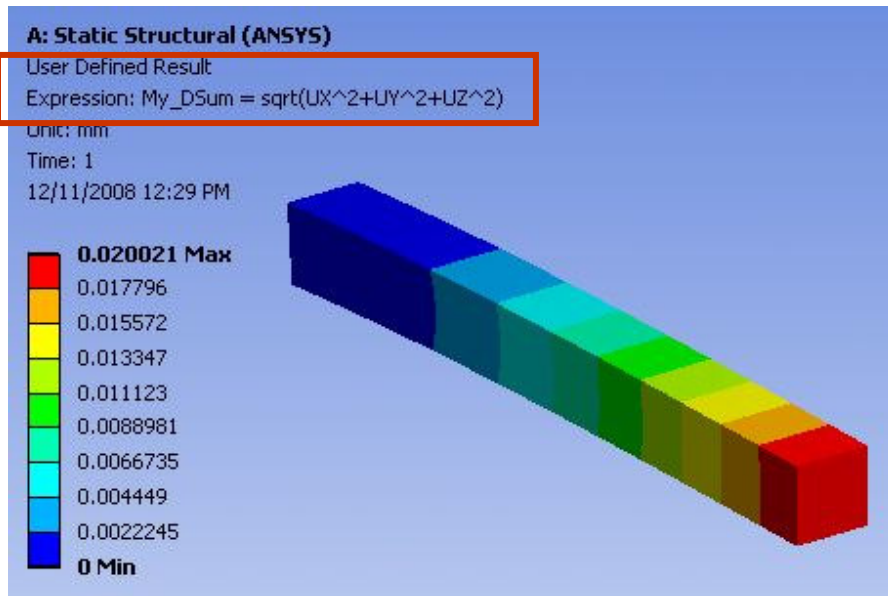

G. Workshop 4.2 – 2D Structural Analysis

- [Workshop 4.2 – 2D Structural Analysis](#)
- 2D structural analyses.
- Shown here is the 2D axisymmetric model.

Pressure Cap

Retaining Ring

